


Calispace Beach 60/70/80 - Assembly instructions

Preparation:

Lay out a sufficiently large area with cardboard (the telescopic rails are greased).
Place the components as shown in the picture.

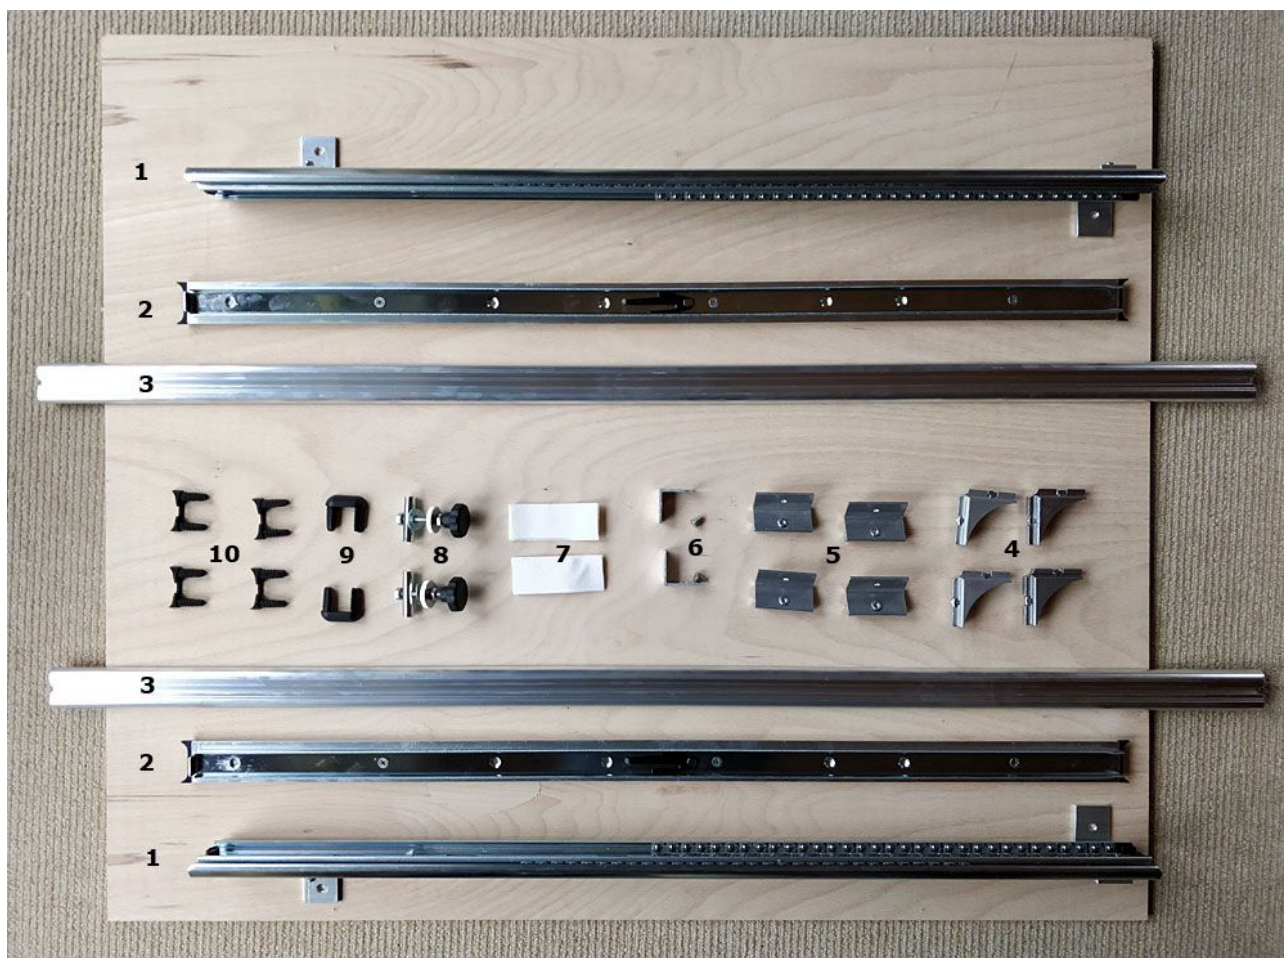

Profile

2	Teleskopschienen mit jeweils 2 vormontierten Winkeln	1
2	schmales Profil mit Schubladenschiene vormontiert und je einer losen Vierkantmutter	2
2	schmales Profil für Schublade vorne und hinten (1048 mm)	3

Schrauben, Verbinder und Zubehör:

4	Verbindungswinkel für Schublade (Basic-Version 4)		4
4	Befestigungsflansch für Schublade		5
2	kleine Winkel für Schublade (30x30x2) und 2 Senkkopfschrauben M5 x 10		6
2	Flauschband, selbstklebend		7
2	Befestigungsschrauben für Bodenschiene	5-teilig	8
2	Endkappen schwarz (1 Packung)	für Profil schmal	9
4	Verbindungskappen	für Profil schmal	10

Tools:


- Allen key, hexagon, 4 mm (Allen key, IKEA key),
- Phillips screwdriver
- Gliederrmaßstab
- maybe hammer.

Drawer frame:


The drawer frame consists of two short profiles left and right (pre-assembled with steel rail) and two long profiles (front and rear). The profiles are connected with the connection angles and the Allen key.

Note:

- Do not tilt profiles and connection angles
- no violence, it is only with feeling!
- Loosen the screws of the connection profiles first
- The left edge of the picture is seen in the direction of travel in front

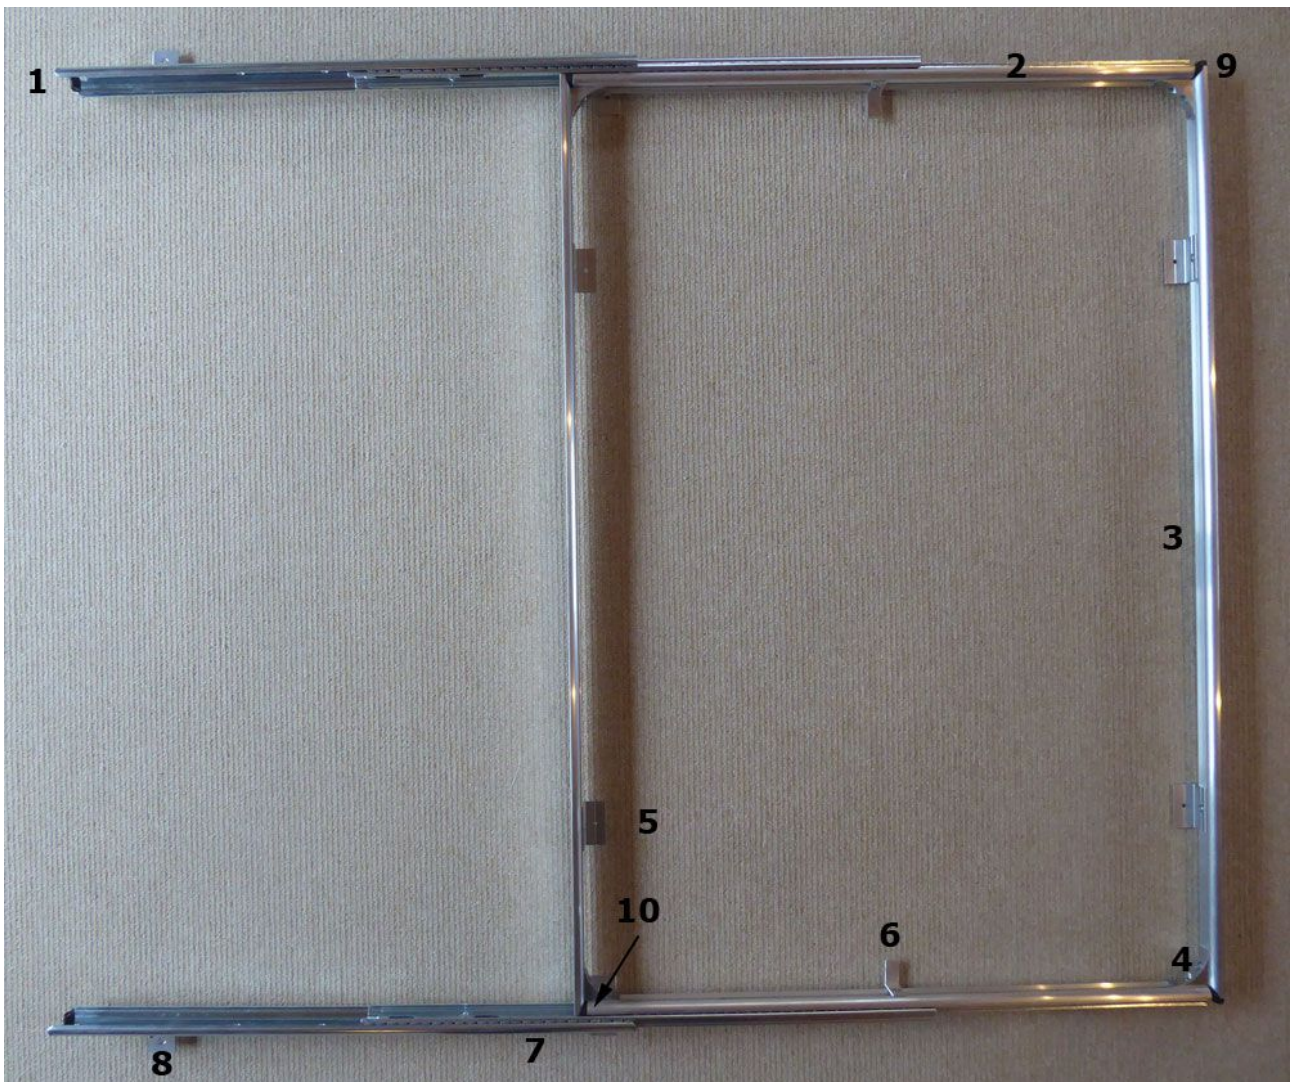

The drawer can also be assembled separately and later introduced as a complete drawer.

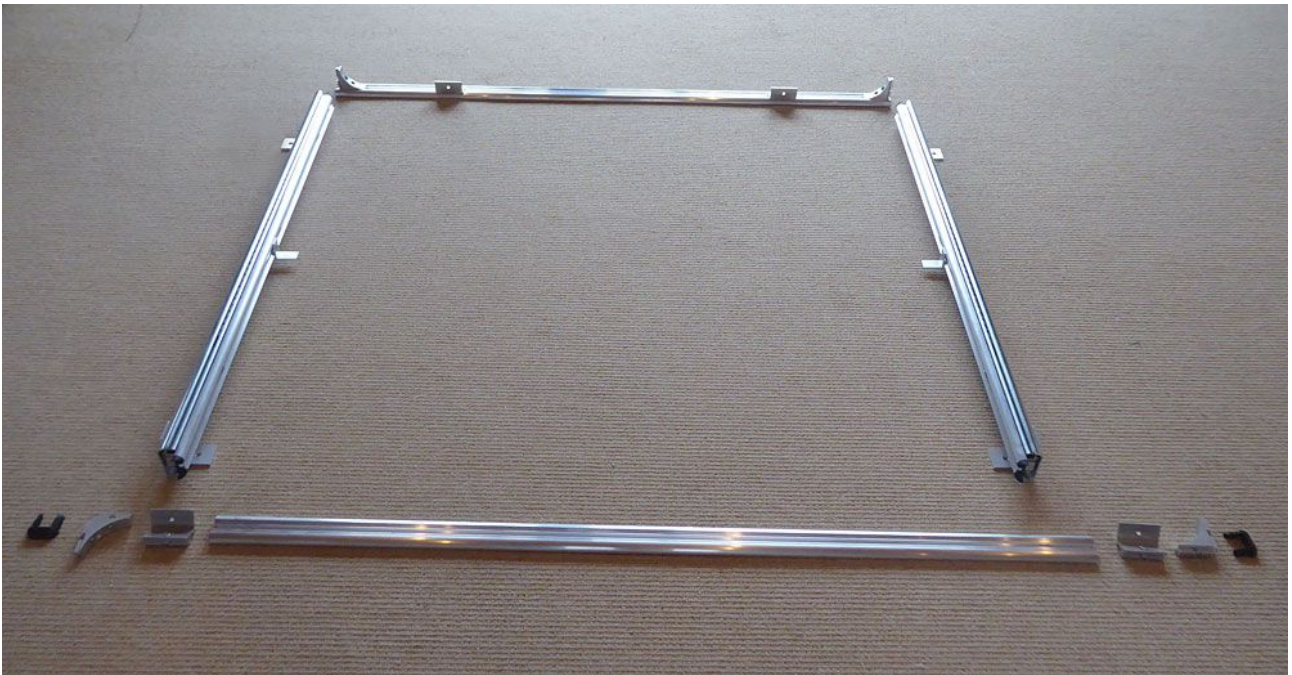







- Insert connection caps (**10**) into the profile (**2**) (already mounted in the illustration).
- Tighten small angles (**6**) left and right.
- Insert 4 x mounting flange (**5**) (20 cm distance to the edge)
- Loosely insert connection bracket (**4**).
- Insert the rear profile (**3**) with the connection angles evenly on both sides. All 4 screws are loosened until the correct positioning!
- Repeat the same with the front profile.
- Tighten all screws (front and rear).
- Finally, insert the two end caps (**9**).



If the angles do not fit perfectly on the screws, the front profile must be readjusted. The installation is flush with the outer edge of the side profile.

Installation instructions:

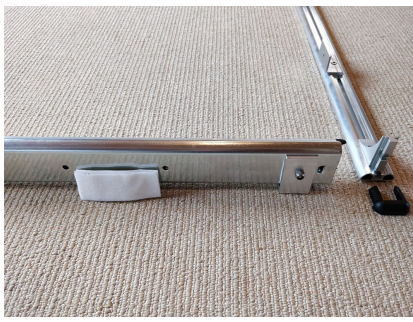 <p>The drawer is unlocked on the sides and can be pulled out completely.</p>	 <p>Inserting the drawer.</p>	 <p>Inserting the mounting screws (please click). **</p>
 <p>The position of the ground screws depends on the depth of the drawer. *</p>	 <p>The fleece band is glued to the left and right in such a way that the telescopic rail is clamped between the frame of the multiflex board.</p>	 <p>Use of the bracket as support if the base plate lies on the corner connectors (corners not rounded).</p>

*

Insert the drawer without the base plate (tilt it so that the paint on the frame is not damaged) and let it protrude slightly at the back. Carefully close the tailgate. Mark the hole of the angle on the bottom rail with a pencil. Place the fixing screws in front of or at the marking. (The grid of the floor rail is 12.5 mm)
Pay attention to the same distance left and right.

**

The nut bolt must be screwed hand-tight and the knurled nut screwed approx. 1 cm. The screw is then countersunk in the rail and placed in the left-hand position and pulled upwards. Then the knurled nut is screwed down by hand while simultaneously pulling up the screw. Now the screw can be screwed in with the flat-head screwdriver to the right until it is fixed on the floor. Finally, the knurled nut is unscrewed.

All screw connections should be regularly checked for tightness.

The use of the rear drawer is at your own risk. We are not liable for damage resulting from the use of the rear drawer.

Hints for improving the rear drawer or instructions I accept gladly.