

Wardrobe Assembly Guide

4 shelf supports (2 short & 2 long supports) together with sundries as shown in the pictures should have been provided.



1. preparation of front and rear end of shelf supports

cut the Velcro tape (hook and loop fastener) in suitable sizes.




Remove the protective foil from the loop tape.



place the loop tape on the shelf support as illustrated.


Cut a matching counterpart of the hook tape

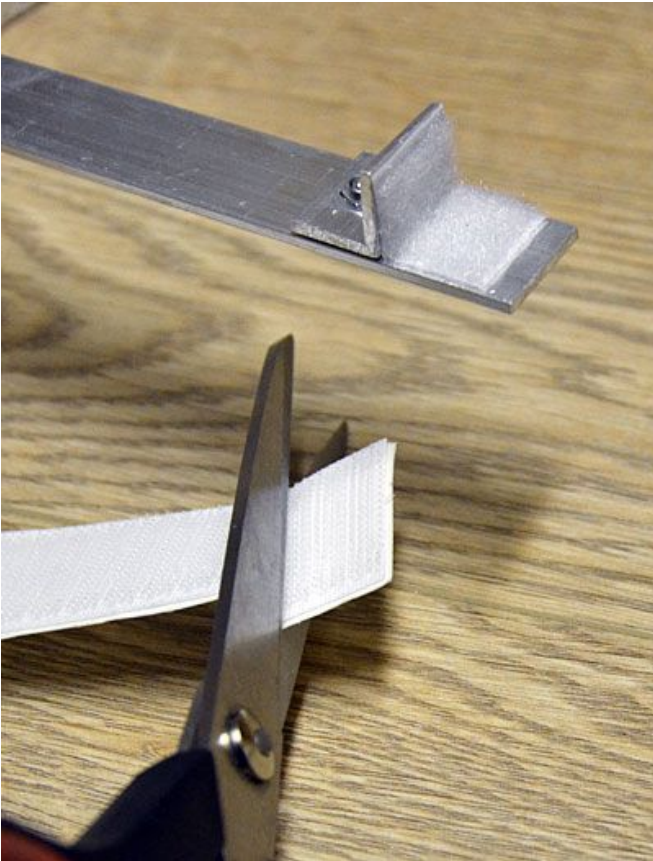

Do not remove the foil yet



The distance between both shelf supports shall be approx. 16 cm
A bit less at the front.

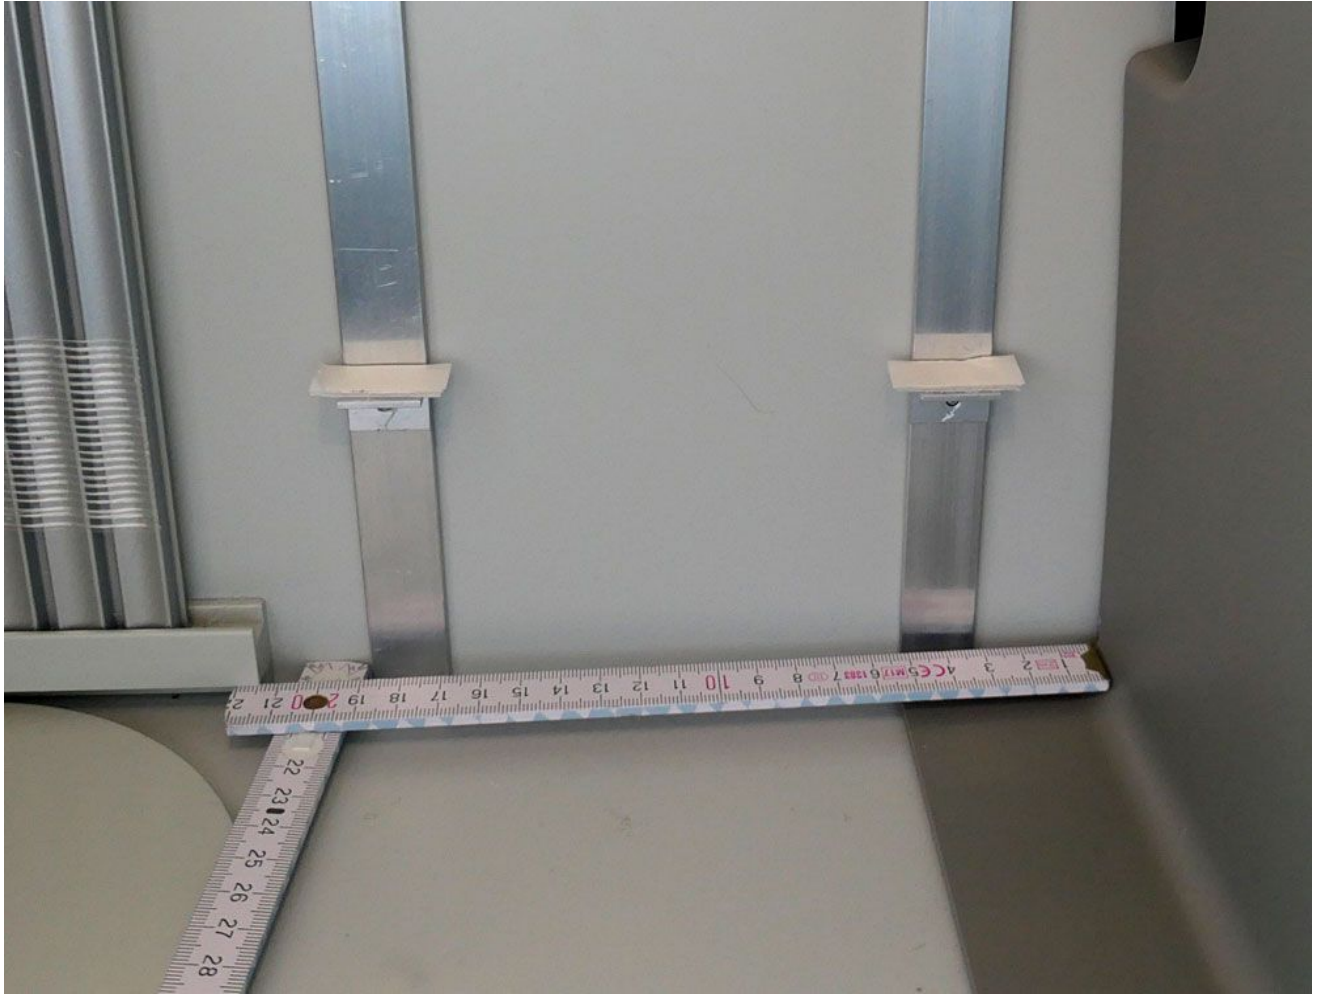

Mark the correct position of the side supports with pencil.

Remove the protective film from the adhesive strips.

Press the splices firmly against the cabinet walls.


Note: If the splices are fixed, the straps can no longer be adjusted!



The figure partially shows the old supports.

2. Installing of shelves. [Video tutorial](#)

- place the medium-wide shelf at the lowest position
- Place the widest shelf in the middle
- Lead the aluminium pipe through the drilling holes of the middle shelf and then through the drilling holes of the bottom shelf.
- Halfway close the lamellar doors.
- Place the narrowest shelf at the top position.
- Lead the aluminium pipe through the drilling holes from below.
- Align each shelf horizontally.
- Install the rubber and adjusting rings:
 - pull up the aluminium pipe as far as the rings for the middle shelf can be installed. Fasten the screw for the adjusting rings finger-tight.
 - Lower the pipe so that the lower rings can be installed. Fasten the screw for the adjusting rings finger-tight.
 - Lift the top shelf in order to install the upper rings. Fasten the screw for the adjusting rings finger-tight.
- If everything fits, tighten the adjusting rings using a slot screwdriver.
- Press the caps onto the pipe ends.

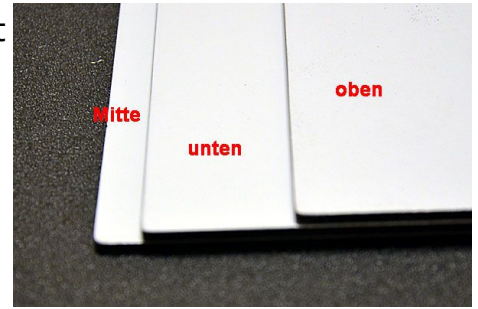

wardrobe expansion 1



wardrobe expansion 2



3. fix the shelves in place using the Velcro tape

slightly lift the shelves up.

Remove the protective foil from the hook tape.

Press the shelves onto the adhesive side of the hook tape, while using the other hand holding from below.

The shelves can be readjusted at any time.

4. Filling the wardrobe



Figures may vary from recent version.

I would be very grateful for your feedback or suggestion for improvements as to the wardrobe or the assembly guide.

All components are manufactured in my workshop and I attach great importance to a high quality standard while retaining a good price-performance ratio.

If, however, something was inadvertently overseen or the jig saw went slightly off path, we kindly offer our apologies.

Please inform us in such a case as we will try to reach a satisfactory solution for you.

Dierk Schröder